


CUTA2180121B

REV	DATE	BY	DESCRIPTION
A	10-22-97	GC	INITIAL RELEASE
B	03-13-02	HM	DESIGN MODIFICATION FOR ADDITIONAL CLEARANCE.
C	04-27-07	MC	UPDATED BODY
D	10-10-07	MC	UPDATED BODY
E	04-28-11	KD	UPDATED BODY

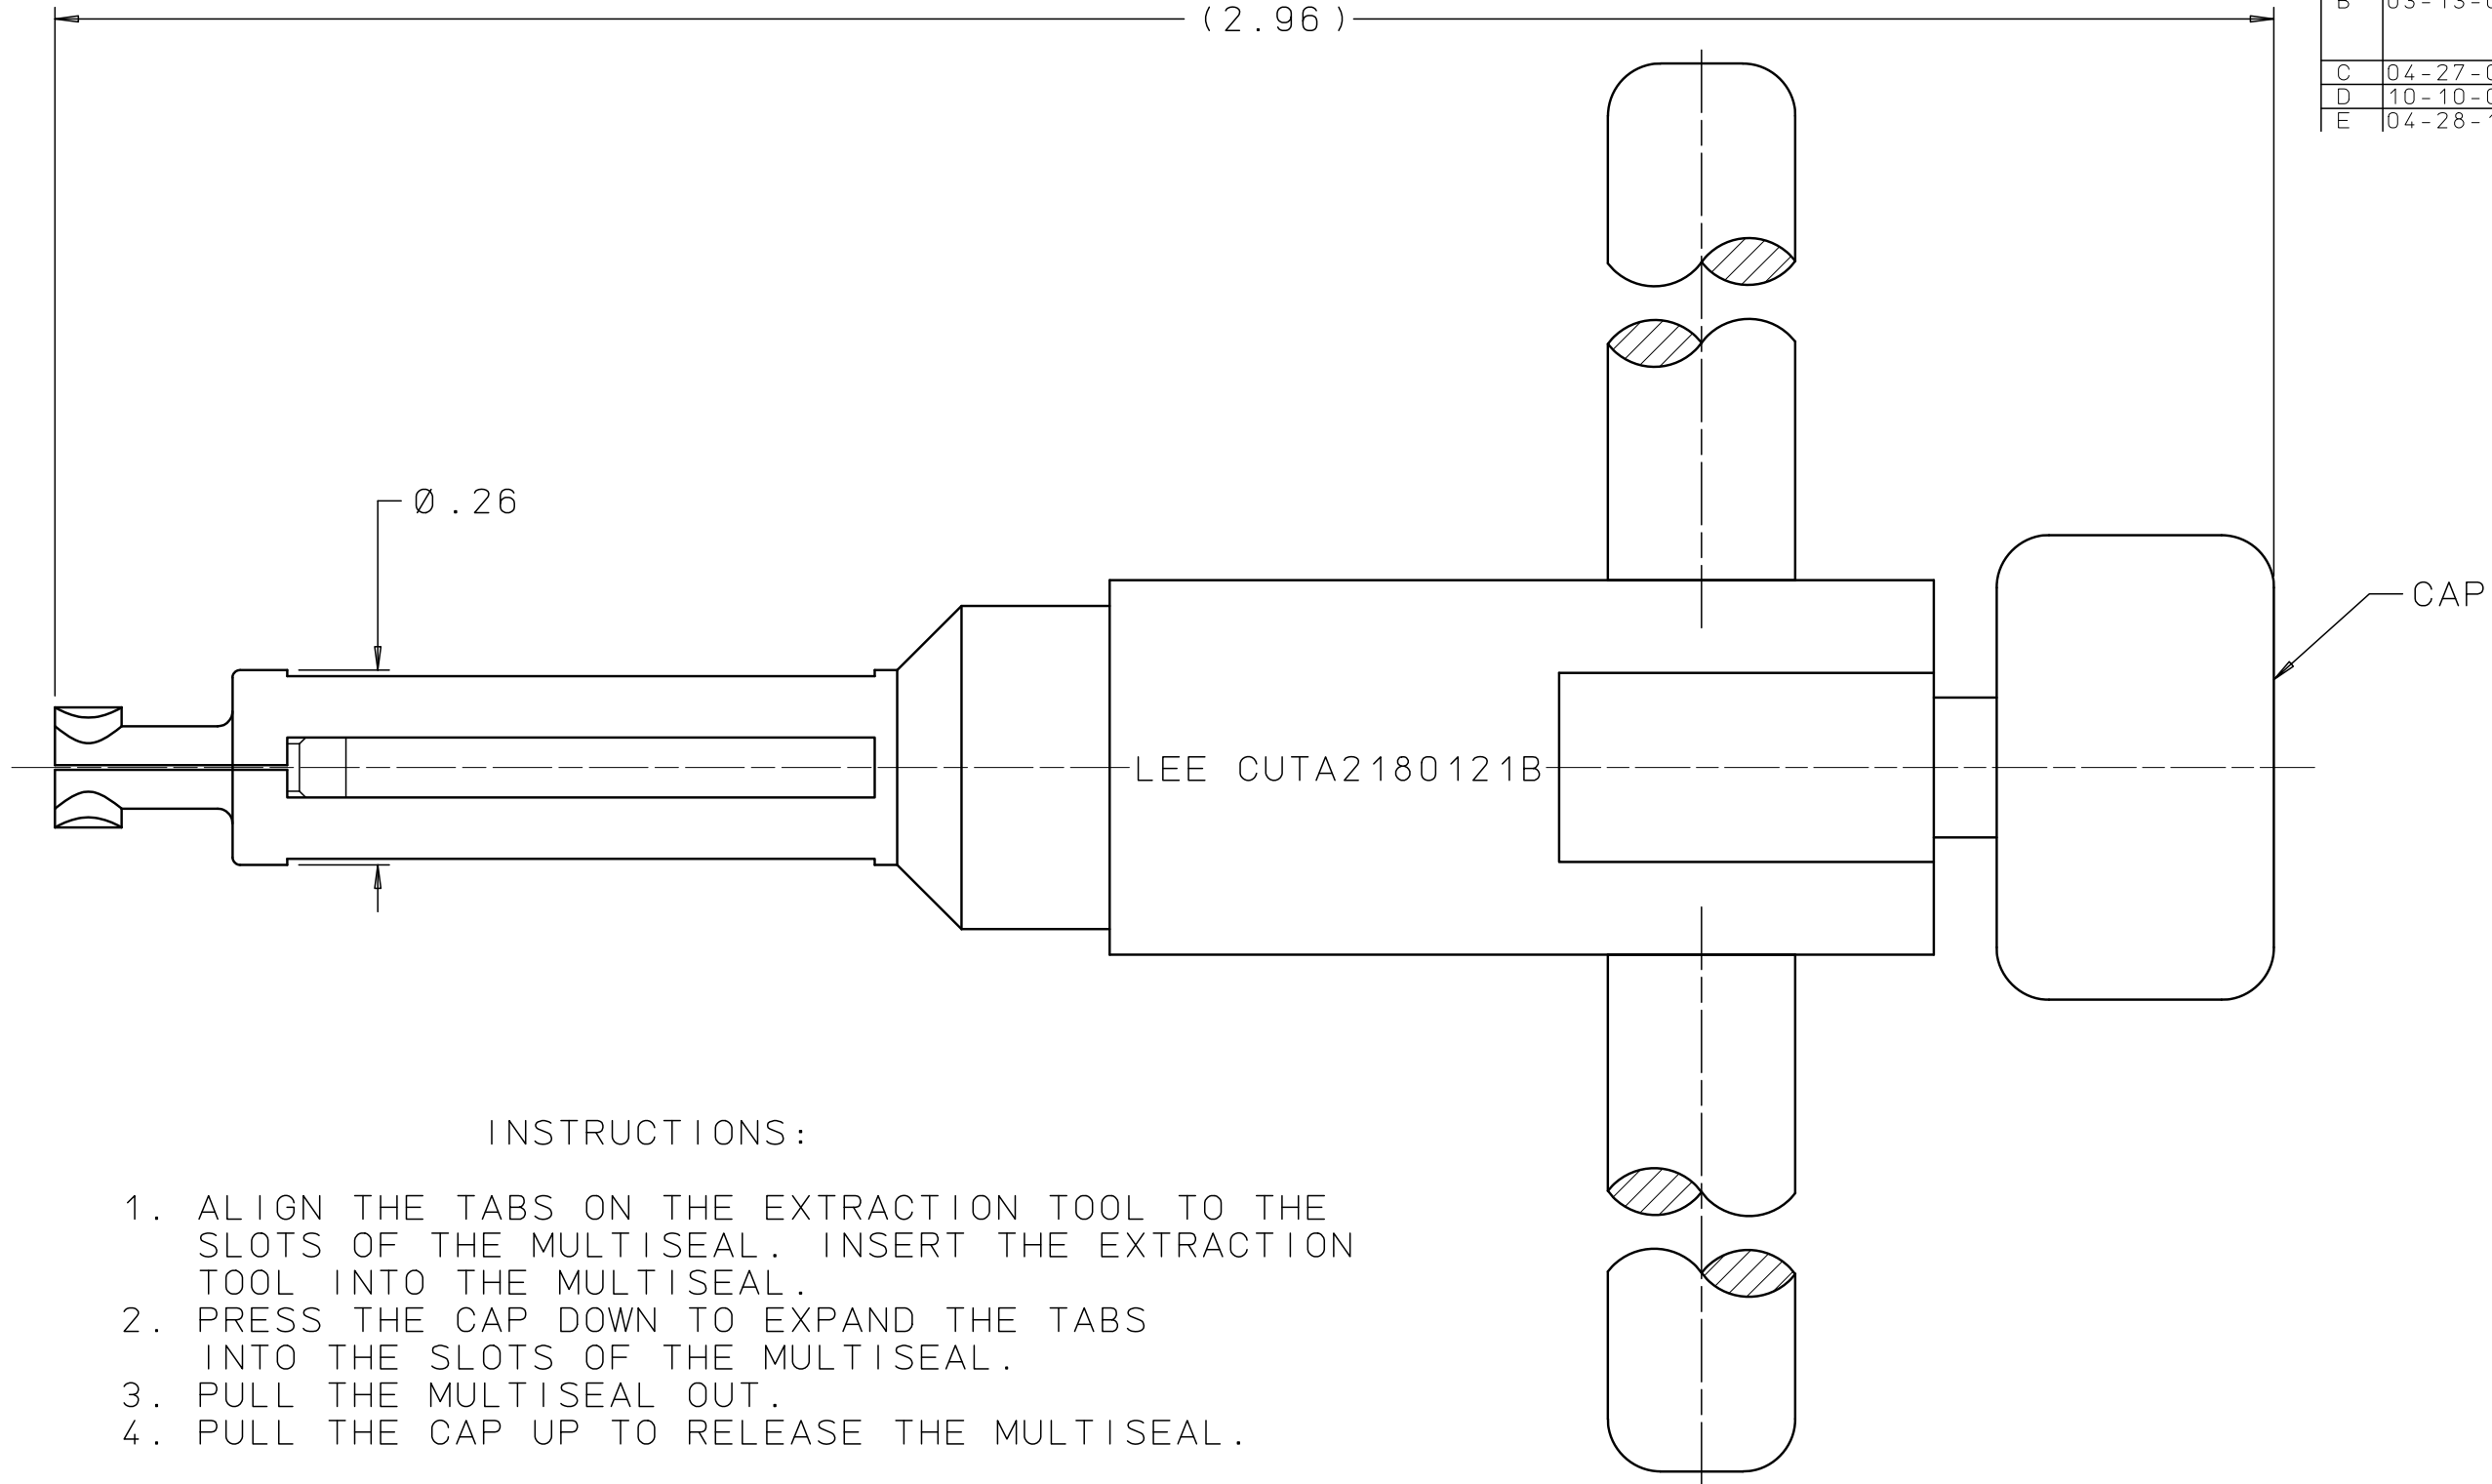

INSTRUCTIONS:

1. ALIGN THE TABS ON THE EXTRACTION TOOL TO THE SLOTS OF THE MULTISEAL. INSERT THE EXTRACTION TOOL INTO THE MULTISEAL.
2. PRESS THE CAP DOWN TO EXPAND THE TABS INTO THE SLOTS OF THE MULTISEAL.
3. PULL THE MULTISEAL OUT.
4. PULL THE CAP UP TO RELEASE THE MULTISEAL.

PROPRIETARY ITEM

This document contains proprietary information and is submitted upon the express condition that the information contained herein will not be used directly or indirectly in any way detrimental to the interests of The Lee Company, and/or in violation of regulation DAR 7-104.9(a)(1 July 1974), et seq.

CUTD0406650
REFERENCE

DWG NO: CUTA2180121B

NOTES AND DIMENSIONS SHOWN HERE ON ARE FOR INSPECTION IDENTIFICATION ONLY. ALL MANUFACTURING RIGHTS RESERVED.

EXTERNAL CORNER RAD:
INTERNAL FILLET RAD:

SURFACE FINISH ✓ ALL OVER
DIMENSIONS ARE IN INCHES

TOLERANCES
2 PLACES 3 PLACES ANGLES
±.015 ±.005 ±5°

DRAWN BY:	G C	10-22-97
CHK'D BY:	L B	10-22-97
APP'D BY:	B B	10-22-97

MAT:

H.T.:

FINISH:

LEE MULTISEAL EXTRACTION TOOL



THE LEE COMPANY
WESTBROOK, CT 06498

SIZE	CAGE CODE	DWG NO.	REV
B	92555	CUTA2180121B	E

DWG SCALE: NONE

SHEET 1 OF 1