


CUTA4330221B

REV	DATE	BY	DESCRIPTION
A	08-20-08	MC	INITIAL RELEASE

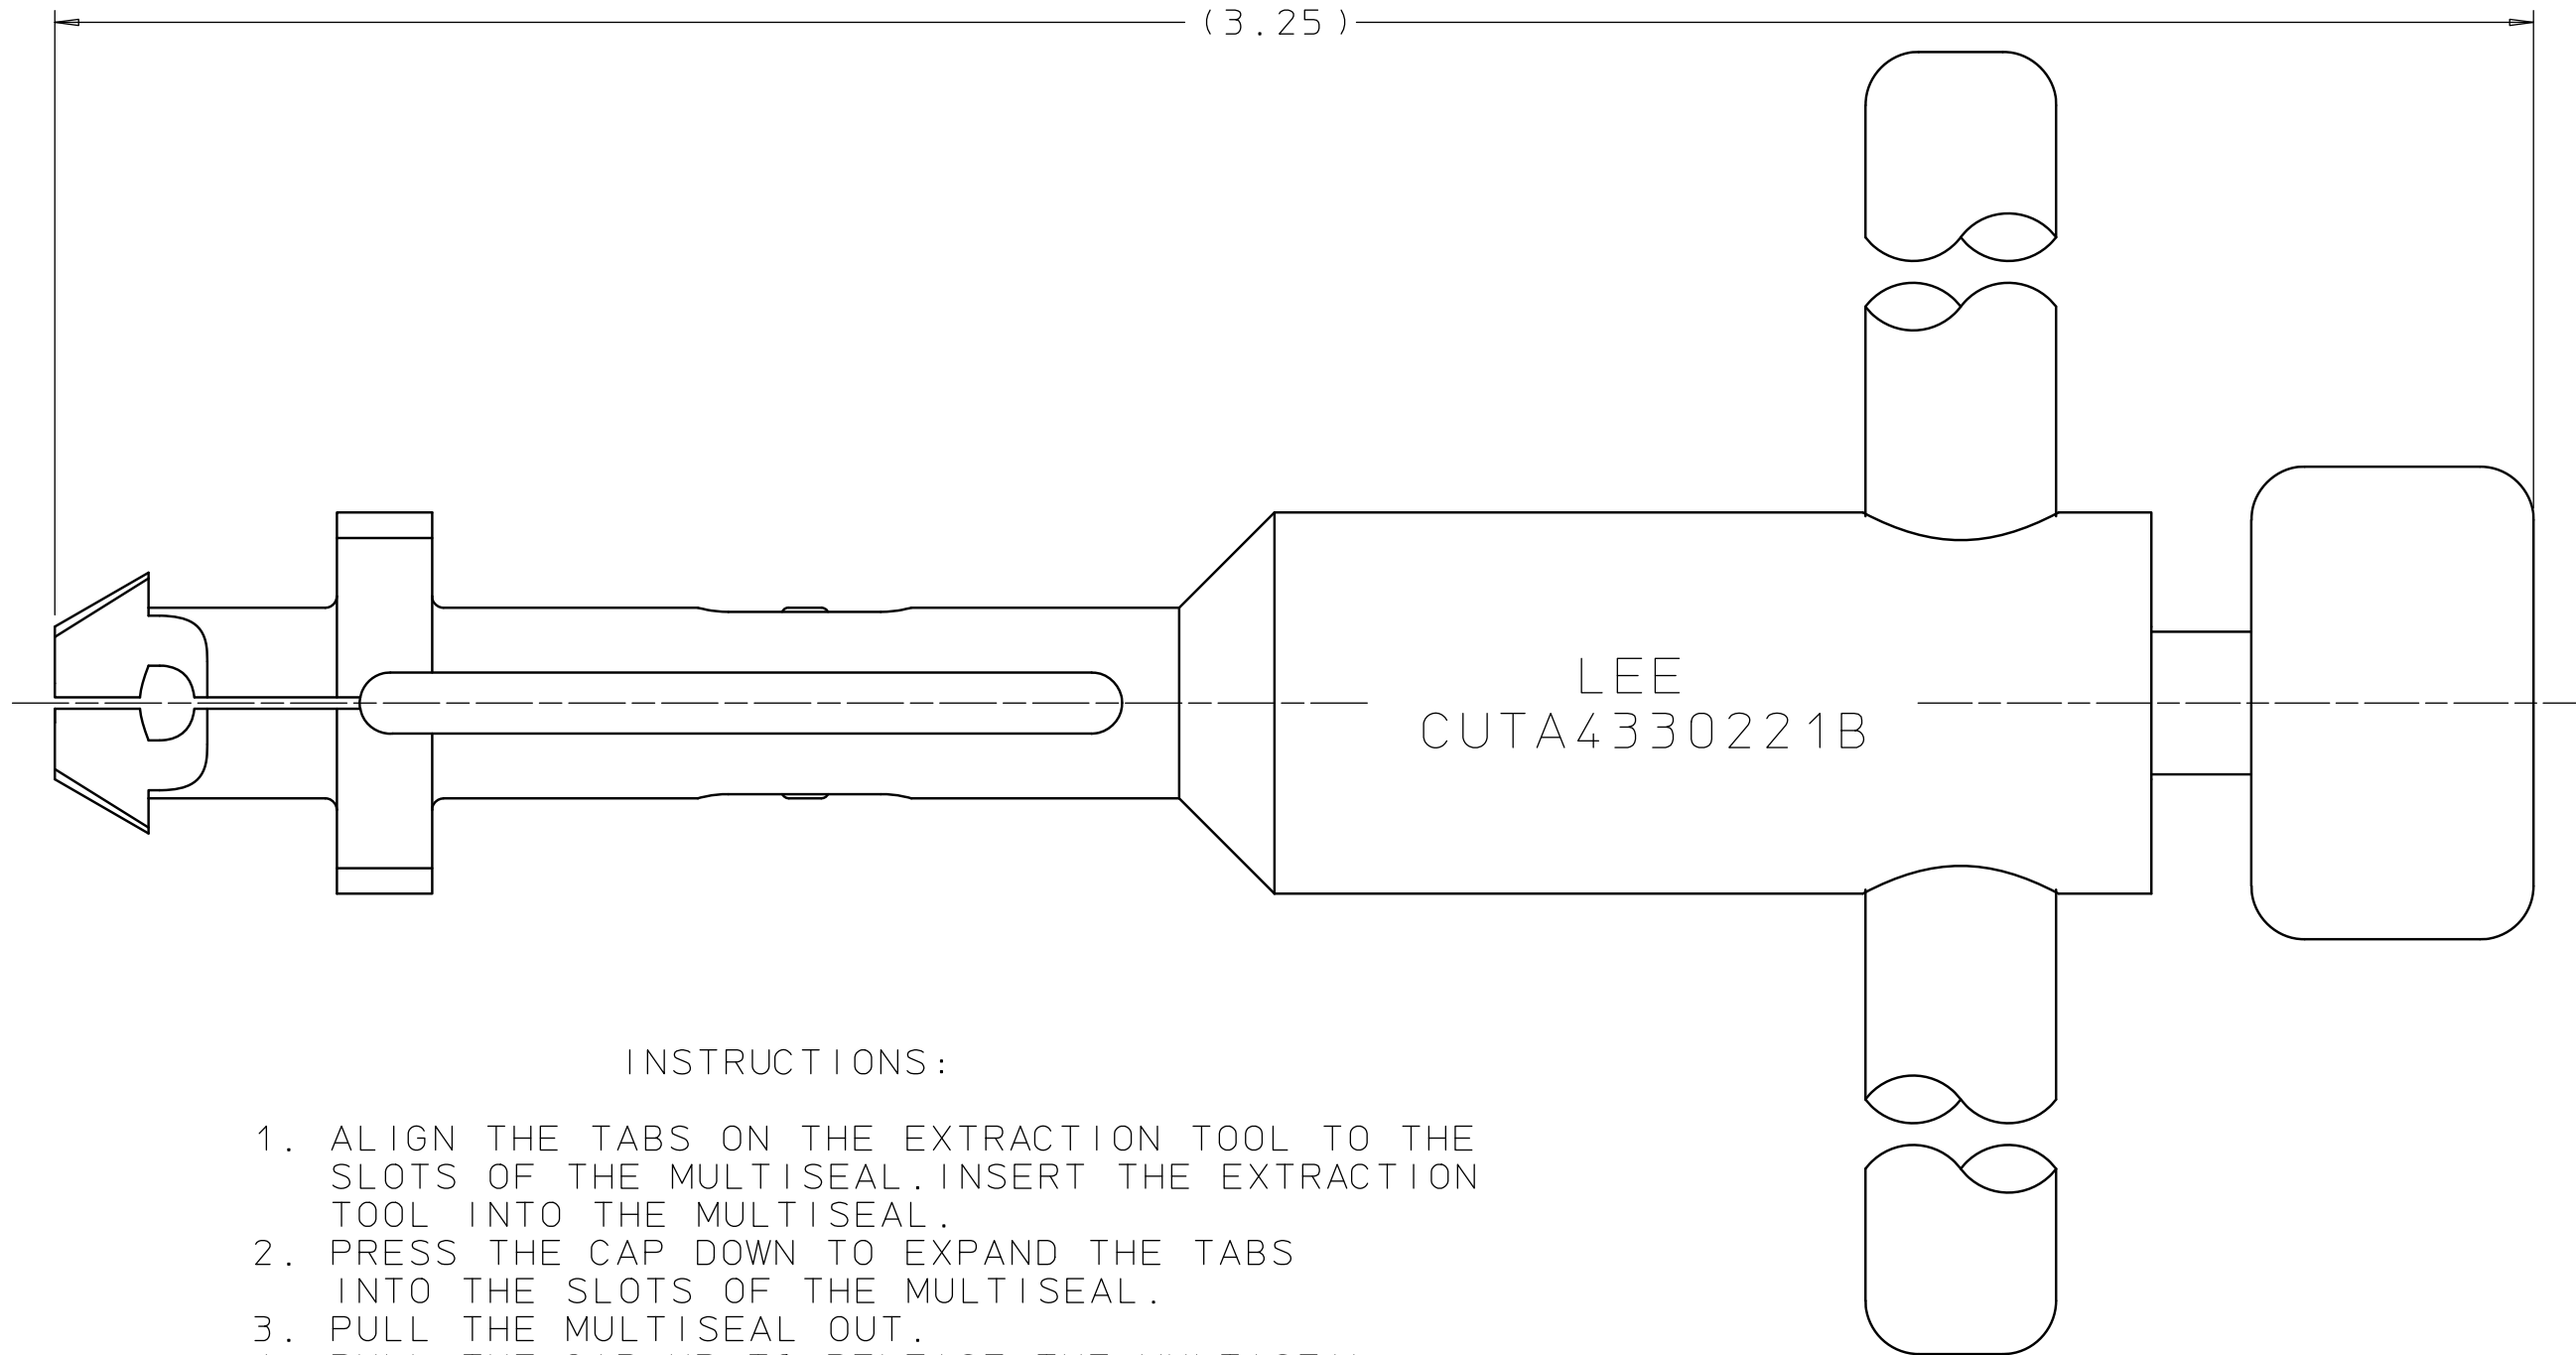


INSTRUCTIONS:

1. ALIGN THE TABS ON THE EXTRACTION TOOL TO THE SLOTS OF THE MULTISEAL. INSERT THE EXTRACTION TOOL INTO THE MULTISEAL.
2. PRESS THE CAP DOWN TO EXPAND THE TABS INTO THE SLOTS OF THE MULTISEAL.
3. PULL THE MULTISEAL OUT.
4. PULL THE CAP UP TO RELEASE THE MULTISEAL.

PROPRIETARY ITEM

This document contains proprietary information and is submitted upon the express condition that the information contained herein will not be used directly or indirectly in any way detrimental to the interests of The Lee Company, and/or in violation of regulation DAR 7-104.9(a)(1 July 1974), et seq.

CUTD0404400
REFERENCE

DWG NO.: CUTA4330221B	UNLESS OTHERWISE SPECIFIED	DRAWN BY: M C	08-20-08	LEE EXTRACTION TOOL, 3 WAY - HI FLOW MULTISEAL	
	EXTERNAL CORNER RAD: INTERNAL FILLET RAD:	CHK'D BY: DEP	08-27-08	 THE LEE COMPANY WESTBROOK, CT 06498	
	SURFACE FINISH ✓ ALL OVER	APP'D BY: B B	09-30-08		
	DIMENSIONS ARE IN INCHES	MAT:		SIZE: B	CAGE CODE: 92555
TOLERANCES 2 PLACES ±.01 3 PLACES ±.003 ANGLES ±2°	H.T.:		DWG SCALE: 4/1		REV: A
FINISH:		SHEET 1 OF 1			